
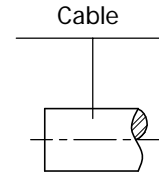
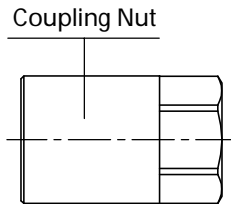


P/N: ANO 9412-2032


Description: SMPM-T straight solder for .086 Cable

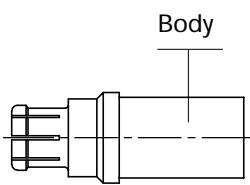

Step 1

Step 1


a. Strip the cable according to the dimensions as shown.

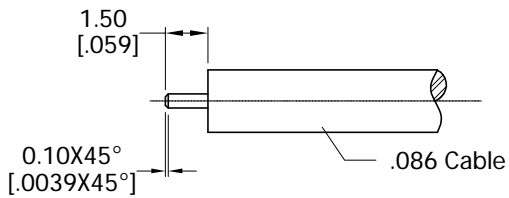

Step 2

Step 2


Coupling nut into connector.

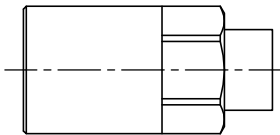

Step 3

Step 3

Insert cable into connector.

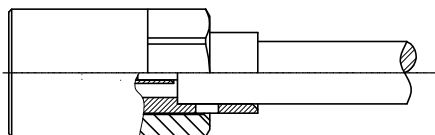

Step 4

Step 4

Solder outer contact.

