

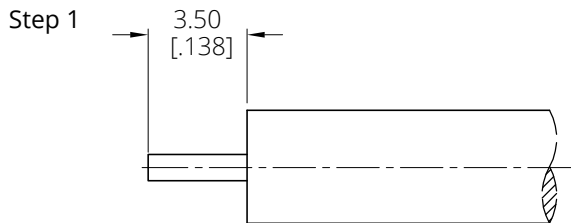
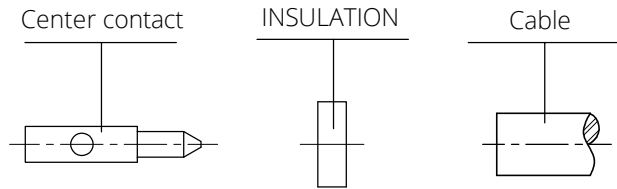


P/N: ANO 7311-2002


Description: QUICK LOCKING SMA straight male solder for .141 Cable

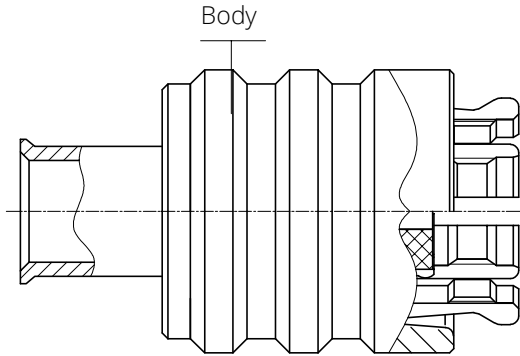

Step 1  
a. Strip the cable according to the dimensions as shown.

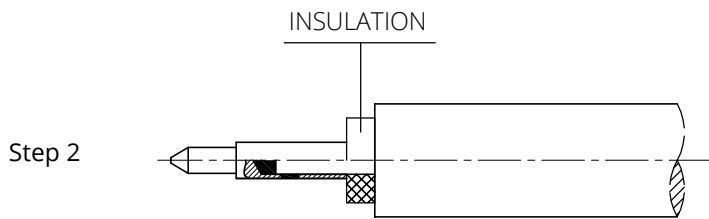

Step 2  
Solder the center contact onto the conductor.

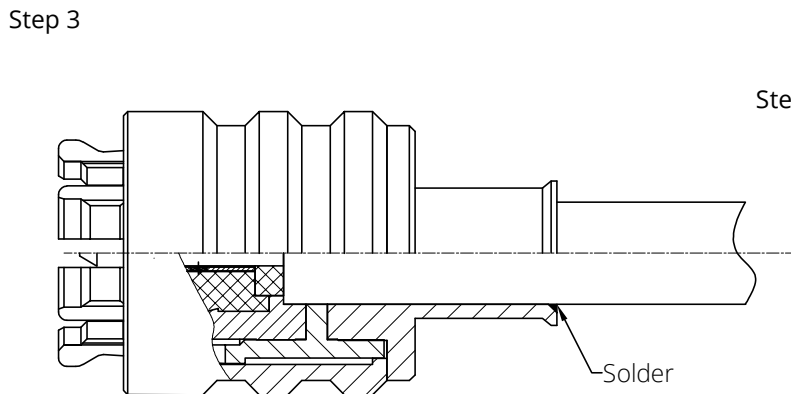

Step 3  
a. Push cable assembly into body until it bottoms as shown.  
b. Solder the body onto the cable.